


# Installation Instructions

1000HR Reveal

FIG. 1

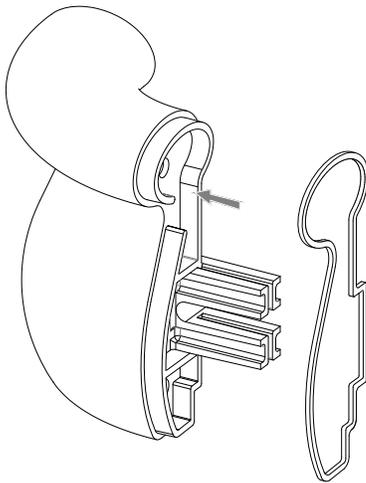


Please read all instructions before installing handrail.

Material must be stored, installed and used in environmentally controlled conditions.

1. Slip reveal over locator surface on Returns, Inside and Outside Corners. **See Fig. 1 & 2.**


FIG. 2

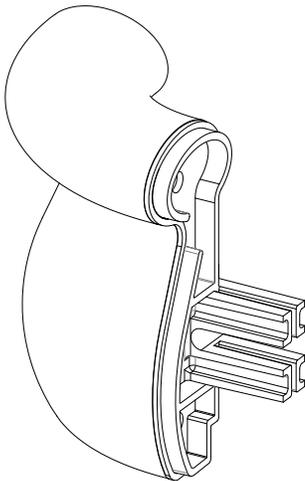

2. Attach Returns and Corners to retainer, leaving 1/16" [2mm] gap between Return/Corner and retainer allowing for adjustment. **See Fig. 3.**

**Note:** Cut cover to length between the reveal pieces on the returns and/or corners.

FIG. 3

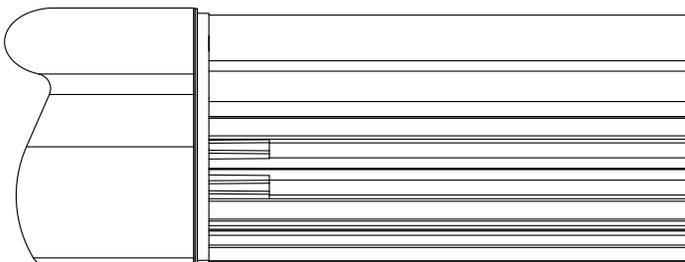

IPC.1684/REV.1

Installation Hotline • 866.EZINPRO  
Inprocorp.com • 800.222.5556 • 262.679.9010  
World Headquarters S80 W18766 Apollo Drive, Muskego, WI 53150 USA

IPC™  
DOOR + WALL PROTECTION SYSTEMS