


# Installation Instructions

920 Handrail REVEAL

---

FIG. 1

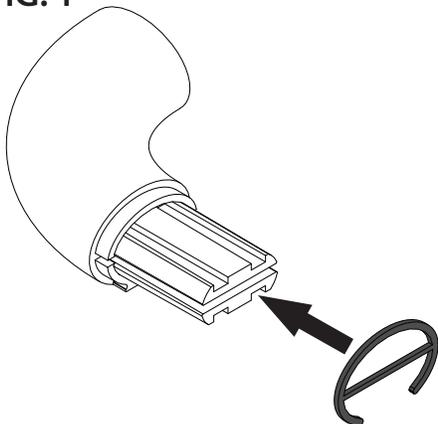


Please read all instructions before installing handrail.

Material must be stored, installed and used in environmentally controlled conditions.


1. Slip reveal over locator surface on Returns, Inside and Outside Corners. See Fig. 1 & 2.

FIG. 2

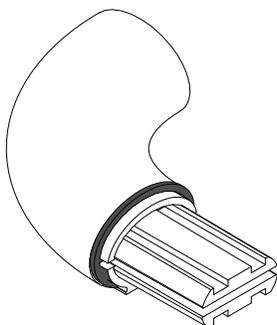

2. Attach Returns and Corners to retainer, leaving 1/16" [2mm] gap between Return/Corner and retainer allowing for adjustment. See Fig. 3.  
Note: Cut cover to length between the reveal pieces on the returns and/or corners.

FIG. 3



IPC.2132/REV.1

Installation Hotline • 866.EZINPRO  
Inprocorp.com • 800.222.5556 • 262.679.9010  
World Headquarters S80 W18766 Apollo Drive, Muskego, WI 53150 USA

**IPC** •  
DOOR + WALL PROTECTION SYSTEMS  
A DIVISION OF INPRO®