


# Nanotrak<sup>®</sup>

## Cubicle Track

---

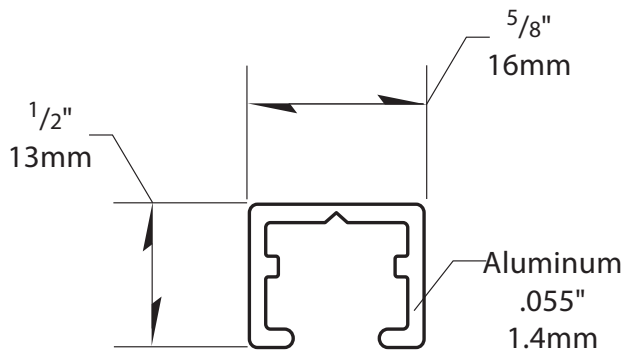

- Extruded aluminum track with white baked acrylic enamel finish
- Simple compact design is a cost-effective track alternative
- Splices and bends available for quick on-site installation
- Manufactured in 8' (2.44m) or 16' (4.88m) lengths to accommodate any application

IPC.503/REV.9

# Nanotrac<sup>®</sup> Cubicle Track

## Suggested Specifications

---

### PART 1 - GENERAL

#### 1.01 SUMMARY

##### A. Cubicle Tracking Systems

#### 1.02 SECTION INCLUDES

##### A. Nanotrac Cubicle Tracking System

##### 1. Overhead metal curtain track and guides

##### 2. Track accessories and attachments

#### 1.03 SUBMITTALS

##### A. Product Data: Manufacturer's printed product data for each type of cubicle tracking system specified.

##### B. Detail Drawings: Mounting details with the appropriate fasteners for specific project substrates.

##### C. Samples: Verification samples of cubicle track, 4" (102mm) long, in full size, with carriers and end cap.

##### D. Manufacturer's Installation Instruction: Printed installation instructions for each cubicle tracking system.

#### 1.04 DELIVERY, STORAGE AND HANDLING

##### A. Deliver materials in unopened factory packaging to the jobsite.

##### B. Inspect materials at delivery to assure that specified products have been received.

##### C. Store in original packaging in a climate controlled location away from direct sunlight.

#### 1.05 PROJECT CONDITIONS

##### A. Environmental Requirements: Products must be installed in an interior climate controlled environment.

#### 1.06 WARRANTY

##### A. Standard Clickeze<sup>®</sup> Limited Lifetime Warranty against material and manufacturing defects.

### PART 2 - PRODUCTS

#### 2.01 MANUFACTURER

##### A. Acceptable Manufacturer: Clickeze<sup>®</sup> Privacy Systems, Inpro Corporation, PO Box 406 Muskego, WI 53150 USA; Telephone: 800.222.5556, Fax:

888.715.8407, www.inprocorp.com

##### B. Substitutions: Not permitted

##### C. Provide all cubicle tracking systems from a single source.

#### 2.02 TRACK MATERIAL

##### A. Cubicle Tracking System

##### 1. Nanotrac, extruded aluminum cubicle track with white baked acrylic enamel finish. Aluminum shall be 6063-T5.

Dimensions: height 1/2" (13mm), width 5/8" (16mm).

CE700008 - 8 foot length (2.44m)

CE700016 - 16 foot length (4.88m)

##### 2. Bent sections: Provide factory bent track sections with one-foot radii to mate with straight track sections:

CE7042 - 2' x 2', 45° bend

CE7092 - 2' x 2', 90° bend

#### 2.03 TRACK COMPONENTS

##### A. Track Splice: Provide molded thermoplastic splice to join track sections.

CE75SPICE - Track Splice

##### B. End Caps: Provide molded thermoplastic end caps for end of track section.

CE7025 End Cap

##### C. Wands: Provide wand to move curtain along track.

CE9224 - Adjustable Chain Wand 24" length

(609mm)

CE100702 - Drapery Wand 33"

CE100679 - Drapery Wand 36"

CE100698 - Drapery Wand 48"

##### D. Curtain Carriers: Provide non-binding carriers to accurately fit track. Carriers to be fitted to curtain to prevent accidental curtain removal. 2.2 carriers per lineal foot of track length, plus one extra carrier.

CE7019 - Nanotrac Slide Carriers

##### E. Tie Backs: Provide curtain tie back to hold curtain back.

CE9251 - Curtain Tie Back - 48" (1.22m) long chain

Fabric Tie Back - 3" x 18", 3/4" white velcro each end.

##### F. Adjustable Drop Chain: Provide drop chain and adjust on site to accommodate curtain at desired height for air/stream circulation.

CE9039 - Adjustable Drop Chain

### PART 3 - EXECUTION

#### 3.01 EXAMINATION

##### A. Examine areas and conditions in which the cubicle tracking systems will be installed.

##### 1. Complete all finishing operations, including painting, before beginning installation of cubicle tracking system materials.

##### 2. Verify that surfaces and above ceiling supports are ready to receive work.

#### 3.02 PREPARATION

##### A. General: Prior to installation, clean substrate to remove dust, debris and loose particles.

#### 3.03 INSTALLATION

##### A. General: Locate the cubicle track as indicated on the approved detail drawing for the appropriate substrate and in compliance with the Clickeze<sup>®</sup> installation instructions.

##### B. Installation of Cubicle Tracking Systems:

##### 1. Install cubicle track, secure, rigid, and true to ceiling line.

##### 2. Slide carriers onto the track.

##### 3. Install end cap or stop device.

##### 4. Secure or suspend track to ceiling system.

##### 5. Install curtains on carriers ensuring smooth operation.

#### 3.04 CLEANING

##### A. At completion of the installation, remove any debris and clean surfaces in accordance with the Clickeze<sup>®</sup> clean-up and maintenance instructions.